


# DP1 1VRS parts list

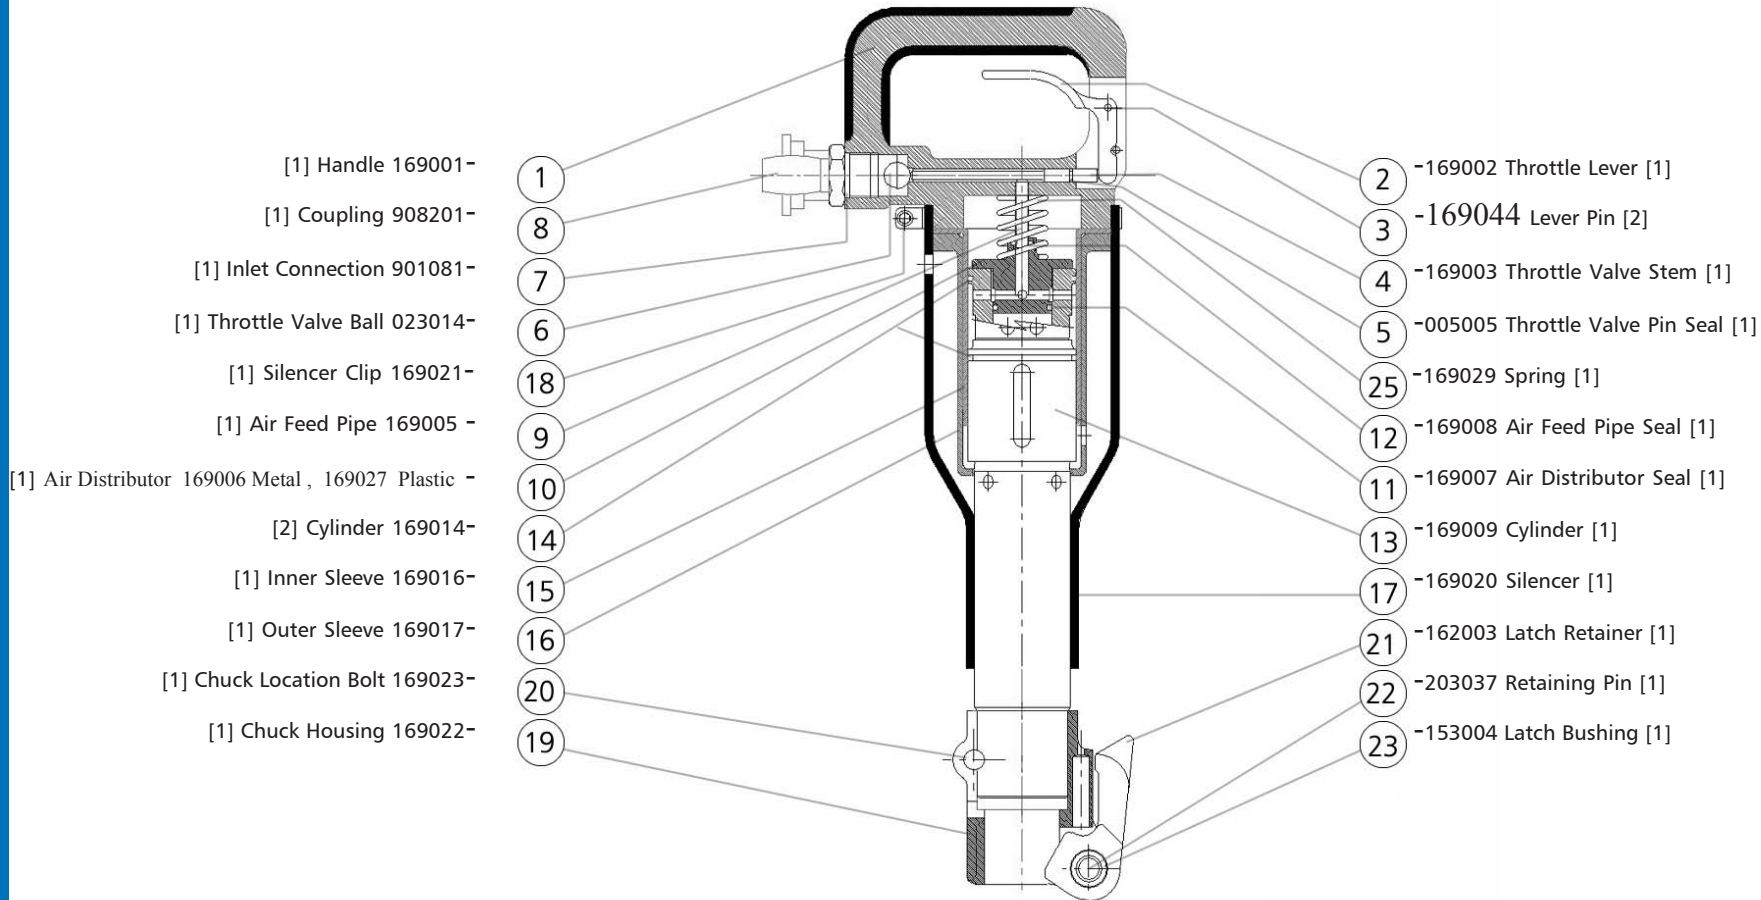

- [1] Handle 169001-
- [1] Coupling 908201-
- [1] Inlet Connection 901081-
- [1] Throttle Valve Ball 023014-
- [1] Silencer Clip 169021-
- [1] Air Feed Pipe 169005 -
- [1] Air Distributor 169006 Metal , 169027 Plastic -
- [2] Cylinder 169014-
- [1] Inner Sleeve 169016-
- [1] Outer Sleeve 169017-
- [1] Chuck Location Bolt 169023-
- [1] Chuck Housing 169022-

- 2 -169002 Throttle Lever [1]
- 3 -169044 Lever Pin [2]
- 4 -169003 Throttle Valve Stem [1]
- 5 -005005 Throttle Valve Pin Seal [1]
- 25 -169029 Spring [1]
- 12 -169008 Air Feed Pipe Seal [1]
- 11 -169007 Air Distributor Seal [1]
- 13 -169009 Cylinder [1]
- 17 -169020 Silencer [1]
- 21 -162003 Latch Retainer [1]
- 22 -203037 Retaining Pin [1]
- 23 -153004 Latch Bushing [1]

## Not Shown

- |                             |                                 |                                |
|-----------------------------|---------------------------------|--------------------------------|
| -169010 KickPort Plug [2]   | -169015 Cylinder Buffer Ring[1] | -169024 Chuck Location Nut [1] |
| -169011 Valve Ring [1]      | -169018 Key [3]                 | -163015 Retainer Plunger [1]   |
| -169012 Valve Pivot Pin [1] | -169019 Piston [1]              | -153018 Retainer Spring [1]    |
|                             | -153002 Tool Bushing [1]        | -169026 Capscrew [4]           |